



Bedienungsanleitung / Handbuch / Datenblatt

**Sie benötigen einen Reparaturservice für Ihren Etikettendrucker
oder suchen eine leicht zu bedienende Etikettensoftware?**

Wir helfen Ihnen gerne weiter.

Ihr Partner für industrielle Kennzeichnungslösungen



**ETIKETTEN-
DRUCKER**



**REPARATUR-
SERVICE**



**VERBRAUCHS-
MATERIALIEN**



**AUTOMATISCHE
ETIKETTIERUNG**



**SCHULUNG &
SUPPORT**



**BARCODESCANNER
DATENERFASSUNG**



**EINZELSOFTWARE INDIVIDUELLE LÖSUNGEN
EINFACHE BEDIENBEREICHEN**

Drucksysteme Janz & Raschke GmbH

Röntgenstraße 1

D-22335 Hamburg

Telefon +49(0)40 – 840 509 0

Telefax +49(0)40 – 840 509 29

kontakt@jrdrucksysteme.de

www.jrdrucksysteme.de



Bedienungsanleitung / Handbuch / Datenblatt

Maßgeschneiderte Lösungen für den Etikettendruck und die Warenkennzeichnung

Seit unserer Gründung im Jahr 1997, sind wir erfolgreich als Partner namhafter Hersteller und als Systemintegrator im Bereich der industriellen Kennzeichnung tätig.



Unser Motto lautet:

So flexibel wie möglich und so maßgeschneidert wie nötig.

Ich stehe mit meinem Namen für eine persönliche und kompetente Beratung. Wir hören Ihnen zu und stellen mit Ihnen eine Lösung zusammen, die Ihren individuellen Anforderungen entspricht. Für Sie entwickeln unsere erfahrenen Techniker und Ingenieure neben Etikettiermaschinen, maßgeschneiderte Komplettlösungen inklusive Produkthandling, Automatisierungstechnik und Softwarelösung mit Anbindung an Ihr Warenwirtschaftssystem.

Ich freue mich von Ihnen zu hören.

Bis dahin grüßt Sie

Jörn Janz

Hier finden Sie Ihren Ansprechpartner:

<http://www.jrdrucksysteme.de/kontakt/>

MAINTENANCE:

Your UCAT-40 requires no maintenance.

Product Limited Warranty

All Labelmate Products are warranted to the original end-user customer to be free from defects in materials and workmanship. If it is determined by Labelmate that a product has failed under the terms of this warranty, the product will be repaired or replaced at no charge to the customer. Labelmate reserves all rights to determination of coverage and liability under this warranty. The warranty period for all new Labelmate products is outlined below:

Warranty Period	Products Covered
5 years	Label Rewinders Label Unwinders
3 years	Label Counters (mechanical parts only) Label Slitters (mechanical parts only) Label Dispensers Printer Mechanisms
1 year	Power Supply Modules Counter modules Encoders Any products not specified above.

The warranty period for all products starts on the date purchased by the original end-user customer. Warranty coverage is not transferable with ownership and will terminate immediately upon rental, resale or any other change in ownership. This warranty does not cover repair to any product which is damaged, has been modified, is missing parts, or has been opened or repaired by any unauthorised person. Use of any unauthorised accessory or attachment will void coverage. Purchase documentation should be retained for coverage verification.

In the event your product requires service, please contact the distributor you bought the product from. The customer assumes responsibility for all cost and risk incurred in transport for service.

Labelmate makes no other warranty of any kind expressed or implied, or to suitability or fitness for a particular purpose. No other person, agent or reseller is authorised to give any warranties on behalf of Labelmate. Any obligation to warranty other than that specifically addressed above is hereby disclaimed.

LABELMATE LLC

69 AVENUE ALPHONSE XIII, 1180 BRUSSELS, BELGIUM

TEL: +322.375.69.60 – FAX: +322.375.38.96


brussels@labelmate.com

www.labelmateeurope.com

UCAT-40

Heavy-Duty "UCAT" On-Demand Powered Label Unwinder

- **Dual Torque Range and Direction Controls**
- **Constant Adjustable Torque™ "CAT" technology**
- **Adjustable Speed Control**
- **Precise Variable Torque Control**

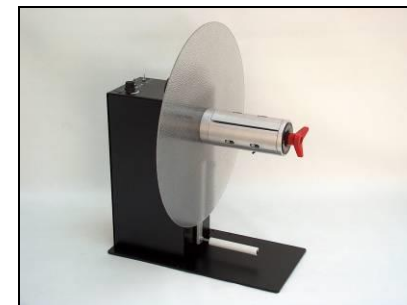

Remove all parts from the shipping container and verify contents.

PACKAGE CONTENTS:

- *User Manual (this document)*
- *UCAT-40 Drive Unit*
- *Power Supply Module*
- *LABELMATE "Quick-Chuck"™ Quick-Locking Core Chuck*
- *Allen Wrench*
- *Plastic Inner Flange Plate*
- *Control Arm with setscrews and shaft screw.*

Retain the Shipping Container and Packaging for Storage and Transport

SPECIFICATIONS:

Weight of the machine: 12,9Kg.

Max. Label Roll Weight: 14Kg.

Max. Label Roll Diam: 400mm.

Start/Stop: ON/OFF/ON Direction Switch

Power Supply: Input: 220-240VAC – 50-60Hz.

Output: 11V AC.



WARNING!
This Product is for indoor use only.
Not for use in wet locations.

IMPORTANT INFORMATION:

- This product is a label unwinder. It is only to be used to unwind labels of the recommended dimensions and weight in an indoor, dry environment.
- The machine has to be unplugged before any manipulation.
- The machine is to be used on a flat surface, if the surface is not flat, it is to be fixed using the holes in the base plate.
- Do not leave the power cable in a passageway.
- The ambient light of the working area needs to be sufficient to avoid any risk.
- The unwinder can be used in ambient temperatures of +2°C to 40°C.
- Connection of the machine to the power source must respect local and European legislations.

SET-UP:

1. Install the Control Arm referring to the enclosed TA User Manual
2. Mount the 400-mm (16") diameter Flange Plate onto the "Quick-Chuck" Core Holder using the screws provided.
3. Slide the "Quick-Chuck" and Flange Assembly onto the UCAT-40 Motor Shaft allowing for clearance to the Chassis and Motor Screws. Tighten the Allen screw to secure the "Quick-Chuck" and Flange Assembly onto the Motor.
4. Set the UCAT-40 in place near the label entrance path of the printer.
5. **CAUTION: AVOID ACCIDENTS. THE UCAT-40 WEIGHS APPROXIMATELY 13KG, SO CHOOSE ONLY A STURDY SURFACE ON WHICH TO SET THE UNIT.**
6. The UCAT-40 is bi-directional. It can rewind labels in either direction.
7. Verify that the "DIRECTION" Switch on the UCAT-40 Control Panel is in the "OFF" position.
8. Plug the Power Plug at the end of the wire on the AC Wall Transformer into the UCAT-40 Power Input Jack. Plug the AC Transformer into an appropriate AC power outlet.
9. The unit is now ready for use.



FOR YOUR SAFETY:
Switch off device before any manipulation.

POWER UNWINDING:

1. Place the "DIRECTION" Switch on the UCAT-40 Control Panel in the centre "OFF" position.
2. Slide the roll of labels to be unwound on the Quick-Chuck.
3. Run the labels under the UCAT-40 Control Arm and into the printer.
4. Place the "DIRECTION" switch in the desired position to feed the labels into your printer.
5. Place the "REWIND –SLIT" Switch in the Rewind position and advance the "TORQUE" Control about 1/3 rotation from fully Counter-Clockwise as an initial setting.
6. Start your printer and observe how the labels are being fed into the printer.

Adjust the "TORQUE" Control as needed to provide more or less unwind assistance. As the printer uses the labels, the Control Arm will rise, causing the UCAT-40 to turn on and feed more labels. As the UCAT-40 feeds more labels, the labels and the Control Arm will drop down, turning off the UCAT-40 until more labels are needed as the Control Arm is lifted again.

EXTERNAL HALT CONTROL:

An External Halt Control jack on the UCAT-3 is for use with external devices capable of providing an open circuit halt command. A 3.5mm control cable is necessary for use (not included).

With Pin 2 and Pin 3 of the External Halt Control circuit closed (connected together using a 3.5mm dual circuit plug), the UCAT-3 will operate. When the External Circuit is opened, the UCAT-3 will stop.

3.5mm "EXTERNAL HALT CONTROL" Stereo Plug (Dual Circuit Plug)

Contact CLOSED=RUN Contact OPEN=HALT

Pin 1 - No connection (NOT USED)

Pin 2 - Normally Closed (NC) contact

Pin 3 - Normally Closed (NC) contact return

