



Bedienungsanleitung / Handbuch / Datenblatt

**Sie benötigen einen Reparaturservice für Ihren Etikettendrucker
oder suchen eine leicht zu bedienende Etikettensoftware?**

Wir helfen Ihnen gerne weiter.

Ihr Partner für industrielle Kennzeichnungslösungen



**ETIKETTEN-
DRUCKER**



**REPARATUR-
SERVICE**



**VERBRAUCHS-
MATERIALIEN**



**AUTOMATISCHE
ETIKETTIERUNG**



**SCHULUNG &
SUPPORT**



**BARCODESCANNER
DATENERFASSUNG**



**EINZELSOFTWARE INDIVIDUELLE LÖSUNGEN
EINFACHE BEDIENBEREICHEN**

Drucksysteme Janz & Raschke GmbH

Röntgenstraße 1

D-22335 Hamburg

Telefon +49(0)40 – 840 509 0

Telefax +49(0)40 – 840 509 29

kontakt@jrdrucksysteme.de

www.jrdrucksysteme.de



Bedienungsanleitung / Handbuch / Datenblatt

Maßgeschneiderte Lösungen für den Etikettendruck und die Warenkennzeichnung

Seit unserer Gründung im Jahr 1997, sind wir erfolgreich als Partner namhafter Hersteller und als Systemintegrator im Bereich der industriellen Kennzeichnung tätig.



Unser Motto lautet:

So flexibel wie möglich und so maßgeschneidert wie nötig.

Ich stehe mit meinem Namen für eine persönliche und kompetente Beratung. Wir hören Ihnen zu und stellen mit Ihnen eine Lösung zusammen, die Ihren individuellen Anforderungen entspricht. Für Sie entwickeln unsere erfahrenen Techniker und Ingenieure neben Etikettiermaschinen, maßgeschneiderte Komplettlösungen inklusive Produkthandling, Automatisierungstechnik und Softwarelösung mit Anbindung an Ihr Warenwirtschaftssystem.

Ich freue mich von Ihnen zu hören.

Bis dahin grüßt Sie

Jörn Janz

Hier finden Sie Ihren Ansprechpartner:

<http://www.jrdrucksysteme.de/kontakt/>

MAINTENANCE:

Your MC-10+ requires no maintenance.

Product Limited Warranty

All Labelmate Products are warranted to the original end-user customer to be free from defects in materials and workmanship. If it is determined by Labelmate that a product has failed under the terms of this warranty, the product will be repaired or replaced at no charge to the customer. Labelmate reserves all rights to determination of coverage and liability under this warranty. The warranty period for all new Labelmate products is outlined below:

Warranty Period	Products Covered
5 years	Label Rewinders Label Unwinders
3 years	Label Counters (mechanical parts only) Label Slitters (mechanical parts only) Label Dispensers Printer Mechanisms
1 year	Power Supply Modules Counter modules Encoders Any products not specified above.

The warranty period for all products starts on the date purchased by the original end-user customer. Warranty coverage is not transferable with ownership and will terminate immediately upon rental, resale or any other change in ownership. This warranty does not cover repair to any product which is damaged, has been modified, is missing parts, or has been opened or repaired by any unauthorised person. Use of any unauthorised accessory or attachment will void coverage. Purchase documentation should be retained for coverage verification.

In the event your product requires service, please contact the distributor you bought the product from. The customer assumes responsibility for all cost and risk incurred in transport for service.

Labelmate makes no other warranty of any kind expressed or implied, or to suitability or fitness for a particular purpose. No other person, agent or reseller is authorised to give any warranties on behalf of Labelmate. Any obligation to warranty other than that specifically addressed above is hereby disclaimed.

LABELMATE LLC

69 AVENUE ALPHONSE XIII, 1180 BRUSSELS, BELGIUM
TEL: +322.375.69.60 – FAX: +322.375.38.96

brussels@labelmate.com
www.labelmateeurope.com

MC-10+

MINI-CAT Label Rewinder



- **Switched Bi-Directional Control.**
- **Build-in Speed/Torque Control**
- **Standard External Control**
- **Constant Adjustable Torque™ "CAT" Technology.**

Remove all parts from the shipping container and verify contents.

PACKAGE CONTENTS:

- *User Manual (this document)*
- *MC-10+ Rewinder Unit*
- *Shaft Assembly with Flange and Bail*
- *3 metal Vanes, 6 Screws for the Vanes.*
- *Power Supply Module*



WARNING!

**This Product is for indoor use only.
Not for use in wet locations.**

Retain the Shipping Container and Packaging for Storage and Transport

SPECIFICATIONS:

Weight of the machine: 5,6Kg
Max. Label Roll Weight: 3Kg.
Max. Label Roll Diam.: 220mm.
Start/Stop: ON/OFF/ON Direction Switch
Power Supply: Input: 220-240VAC – 50-60Hz.
Output: 15VDC – 800 mA

• **KEEP MANUAL IN A SAFE PLACE FOR FUTURE REFERENCE** •

IMPORTANT INFORMATION:

- This product is a label rewinder It is only to be used to rewind labels of the recommended dimensions and weight in an indoor, dry environment.
- The machine has to be unplugged before any manipulation.
- The machine is to be used on a flat surface, if the surface is not flat, it is to be fixed using the holes in the base plate.
- Do not leave the power cable in a passageway.
- The ambient light of the working area needs to be sufficient to avoid any risk.
- The rewinder can be used in ambient temperatures of +2°C to 40°C.
- Connection of the machine to the power source must respect local and European legislations.

SET-UP:

1. Place the MC-10+ with the Rewind Shaft perpendicular to the web of the labels to be rewound. The MC-10+ is bi-directional, so can be operated in either direction.
2. Verify that the (ON/OFF/ON) Direction Switch on the rear of the Unit is in the OFF (0) position.
3. Insert the Power Cord into the Power Jack on the rear of the MC-10+ and plug the AC/DC Adapter into a suitable electrical outlet. It can be left plugged in at all times.
4. The MC-10+ has a combination Power and (ON/OFF/ON) Direction Switch on the Rear Panel. To make the Rewinder run to the right (looking from the rear of the Rewinder), press the Power / Direction Switch in the direction of the right arrow. To make the Rewinder run to the left, press in the direction of the left arrow.



 **FOR YOUR SAFETY:**
Switch off device before any manipulation.

REWINDING LABELS

1.a Directly "On-Shaft" ("coreless"): Slide the hook-shaped metal Bail onto the MC-10 Shaft. The straight end goes into the hole in the plastic Flange Plate. The curved end fits into the small hole in the outer end of the Shaft. Insert the label web under the Bail and turn the Rewind Shaft by hand to secure the labels.


1.b On a Cardboard Core: Install the 3-stainless steel Fins onto the Rewind Shaft of the MC-10 using the 6-screws provided. The curved sides of the Fins face the Shaft. For narrow cores, orient the Fins next to the plastic Flange. Slide an empty cardboard core over the Fins and up against the plastic Flange Plate.

2. Place the MC-10 (ON/OFF/ON Direction) Switch to the ON position in the desired direction of operation, left or right.
3. Start the Printer and observe that the labels are being rewound correctly. Adjust the SPEED/TORQUE Control knob for the desired take-up tension. Use the minimum "SPEED/TORQUE" setting needed to rewind labels properly. Excessive torque might pull the labels too hard and cause the printer to lose registration.
4. When rewinding is finished, place the MC-10 (ON/OFF/ON) Switch in the OFF (0) position.
5. To remove the labels, first pull out the hook-shaped bail (coreless) or slide the core and the labels off the MC-10+ (cardboard core).



EXTERNAL CONTROL

The MC+ can be controlled by the printer. A 3.5mm (mono) connector for an External Control Input (start/stop) is provided and a matching jack is enclosed. The MC+ can react to different types of signals provided by the printer. The selection of the signal nature is done via 2 jumpers on the MC+ internal PCB. Four modes are selectable: Open Collector High Active, Open Collector Low Active, Logic Level High Active (**Max 10VDC**) & Logic Level Low Active (**Max 10VDC**).



	JP2	JP3
SIG ACT LOW		1
SIG ACT HIGH		2
OPEN COL LOW	X	1
OPEN COL HIGH	X	2

The factory setting is "Open Collector high". Other default setting on request.