



Bedienungsanleitung / Handbuch / Datenblatt

**Sie benötigen einen Reparaturservice für Ihren Etikettendrucker
oder suchen eine leicht zu bedienende Etikettensoftware?**

Wir helfen Ihnen gerne weiter.

Ihr Partner für industrielle Kennzeichnungslösungen



**ETIKETTEN-
DRUCKER**



**REPARATUR-
SERVICE**



**VERBRAUCHS-
MATERIALIEN**



**AUTOMATISCHE
ETIKETTIERUNG**



**SCHULUNG &
SUPPORT**



**BARCODESCANNER
DATENERFASSUNG**



**EINZELSOFTWARE INDIVIDUELLE LÖSUNGEN
EINFACHE BEDIENBEREICHEN**

Drucksysteme Janz & Raschke GmbH

Röntgenstraße 1

D-22335 Hamburg

Telefon +49(0)40 – 840 509 0

Telefax +49(0)40 – 840 509 29

kontakt@jrdrucksysteme.de

www.jrdrucksysteme.de



Bedienungsanleitung / Handbuch / Datenblatt

Maßgeschneiderte Lösungen für den Etikettendruck und die Warenkennzeichnung

Seit unserer Gründung im Jahr 1997, sind wir erfolgreich als Partner namhafter Hersteller und als Systemintegrator im Bereich der industriellen Kennzeichnung tätig.



Unser Motto lautet:

So flexibel wie möglich und so maßgeschneidert wie nötig.

Ich stehe mit meinem Namen für eine persönliche und kompetente Beratung. Wir hören Ihnen zu und stellen mit Ihnen eine Lösung zusammen, die Ihren individuellen Anforderungen entspricht. Für Sie entwickeln unsere erfahrenen Techniker und Ingenieure neben Etikettiermaschinen, maßgeschneiderte Komplettlösungen inklusive Produkthandling, Automatisierungstechnik und Softwarelösung mit Anbindung an Ihr Warenwirtschaftssystem.

Ich freue mich von Ihnen zu hören.

Bis dahin grüßt Sie

Jörn Janz

Hier finden Sie Ihren Ansprechpartner:

<http://www.jrdrucksysteme.de/kontakt/>

MAINTENANCE:

Keep the Label Sensor and Stripper Bar clean, following instructions page 1.

Product Limited Warranty

All Labelmate Products are warranted to the original end-user customer to be free from defects in materials and workmanship. If it is determined by Labelmate that a product has failed under the terms of this warranty, the product will be repaired or replaced at no charge to the customer. Labelmate reserves all rights to determination of coverage and liability under this warranty. The warranty period for all new Labelmate products is outlined below:

Warranty Period	Products Covered
5 years	Label Rewinders Label Unwinders
3 years	Label Counters (mechanical parts only) Label Slitters (mechanical parts only) Label Dispensers Printer Mechanisms
1 year	Power Supply Modules Counter modules Encoders Any products not specified above.

The warranty period for all products starts on the date purchased by the original end-user customer. Warranty coverage is not transferable with ownership and will terminate immediately upon rental, resale or any other change in ownership. This warranty does not cover repair to any product which is damaged, has been modified, is missing parts, or has been opened or repaired by any unauthorised person. Use of any unauthorised accessory or attachment will void coverage. Purchase documentation should be retained for coverage verification.

In the event your product requires service, please contact the distributor you bought the product from. The customer assumes responsibility for all cost and risk incurred in transport for service.

Labelmate makes no other warranty of any kind expressed or implied, or to suitability or fitness for a particular purpose. No other person, agent or reseller is authorised to give any warranties on behalf of Labelmate. Any obligation to warranty other than that specifically addressed above is hereby disclaimed.

LABELMATE LLC

69 AVENUE ALPHONSE XIII, 1180 BRUSSELS, BELGIUM

TEL: +322.375.69.60 – FAX: +322.375.38.96

brussels@labelmate.com

www.labelmateeurope.com

LD-100S / LD-200S

Label Dispenser for Very Small or Odd-shaped Labels

- **Variable Speed Control**
- **Press-to-Run Foot Switch**
- **Works with labels as small as 5mm**



Remove all parts from the shipping container and verify contents.

PACKAGE CONTENTS:

- *User Manual (this document)*
- *Label Dispenser Unit*
- *Foot Switch*
- *Power Supply Module*

Retain the Shipping Container and Packaging for Storage and Transport.

VERY IMPORTANT:

- **Keep Tape Stripper Bar and Web Guide Bars clean. Use isopropyl alcohol or "Goo-Gone"™ to clean adhesive residue from parts. Adhesive build-up can cause malfunction and damage to your unit.**

SPECIFICATIONS:

Weight of the machine: 5 Kg.

Max. Label Roll Weight: 4.5 Kg.

Max. Label Roll Size: 220 mm diameter – 300 mm with LD-DE.

Power Supply: Input: 220-240VAC – 50-60Hz.

Output: 11VAC – 2.5A

- **KEEP MANUAL IN A SAFE PLACE FOR FUTURE REFERENCE** •



WARNING!
This Product is for indoor use only.
Not for use in wet locations.

IMPORTANT INFORMATION:


- This product is a label dispenser. It is only to be used to dispense labels of the recommended dimensions and weight in an indoor, dry environment.
- The machine has to be unplugged before any manipulation.
- The machine is to be used on a flat surface, if the surface is not flat, it is to be fixed using the holes in the base plate.
- Do not leave the power cable in a passageway.
- The ambient light of the working area needs to be sufficient to avoid any risk.
- The dispenser can be used in ambient temperatures of +2°C to 40°C.
- All measures have been taken to minimise risks of injuries with the take-up shaft but the operator has to be careful when manipulating the bail.
- Connection of the machine to the power source must respect local and European legislations.

SET-UP AND USE:

1. Set the LD-100S in place and plug the cord from the Power Supply Module into the Power Input Jack on the rear of the Unit.
2. Place the Foot Switch as desired and plug the cord into the Foot Switch Jack on the front of the Unit. The Unit will operate without the Switch.
3. Make sure the Power Switch is in the "OFF" position.
4. Connect the Power Supply Module to a suitable AC power source.
5. Place your roll of labels on the Label Roll Holder & slide the plastic Roll Lock Ring on the Roll Holder to the width of your label web.
6. Thread the label web between the Strip Bar and the Round Rod directly above it. There should be about 1- to 2-mm between the inside edge of the label web and the Strip Bar frame.
7. Pull the label web back under the Web Guide and slide the width adjuster to the width of the web.
8. Pull the web up over the Round Rod directly in front of the Strip Bar and around the front of the Web Roller.


9. Now pull the web under the Take-Up Shaft and loop the web UNDER the Wire Bail on the Take-Up Shaft as shown in the illustration.
10. Place the Power Switch in the "ON" position.
11. When the Foot Switch is depressed, labels will advance.
12. Adjust the Speed Control as desired.
13. Optional Label Flanges are available. Order LD-FLANGES. Recommended for narrow or loosely wound labels that may have a tendency to telescope or fall off the label core.

A vacuum handling tool might help pick up very small labels in some cases, but often labels are very sticky and may be pushed back onto the label web by the tool. If you want to try it, a simple "Handi-Vac"® tool is available from Virtual Industries, Inc. www.virtual-ii.com

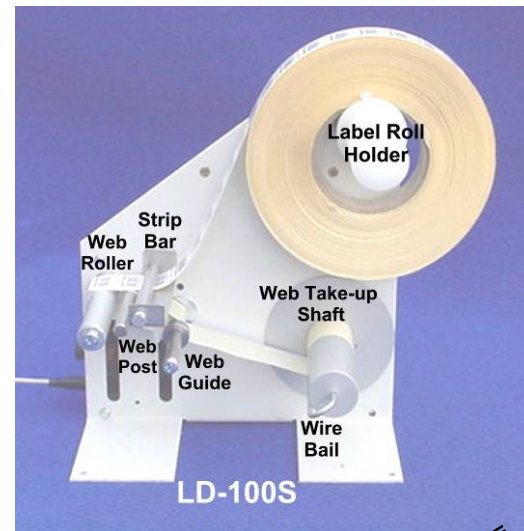

FOR YOUR SAFETY:
Switch off device before
removing the bail.

WEB ROLLER

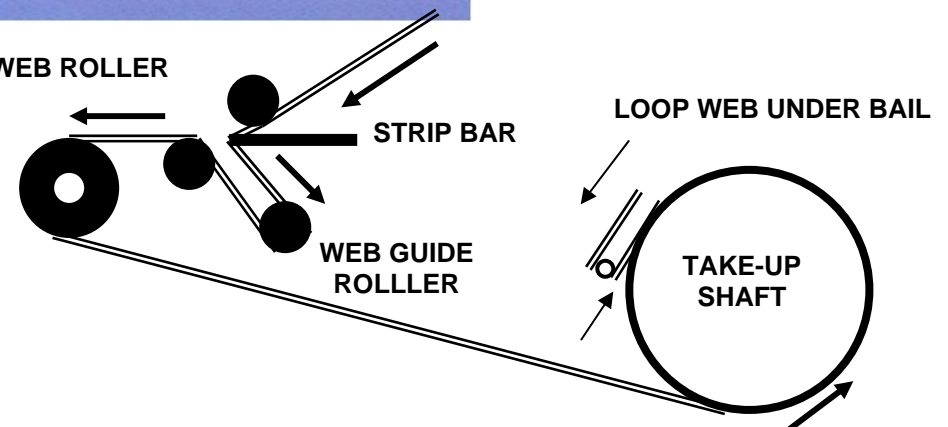

LOOP WEB UNDER BAIL

**TAKE-UP
SHAFT**