



Bedienungsanleitung / Handbuch / Datenblatt

**Sie benötigen einen Reparaturservice für Ihren Etikettendrucker
oder suchen eine leicht zu bedienende Etikettensoftware?**

Wir helfen Ihnen gerne weiter.

Ihr Partner für industrielle Kennzeichnungslösungen



**ETIKETTEN-
DRUCKER**



**REPARATUR-
SERVICE**



**VERBRAUCHS-
MATERIALIEN**



**AUTOMATISCHE
ETIKETTIERUNG**



**SCHULUNG &
SUPPORT**



**BARCODESCANNER
DATENERFASSUNG**



**EINZELSOFTWARE INDIVIDUELLE LÖSUNGEN
EINFACHE BEDIENBEREICHEN**

Drucksysteme Janz & Raschke GmbH

Röntgenstraße 1

D-22335 Hamburg

Telefon +49(0)40 – 840 509 0

Telefax +49(0)40 – 840 509 29

kontakt@jrdrucksysteme.de

www.jrdrucksysteme.de



Bedienungsanleitung / Handbuch / Datenblatt

Maßgeschneiderte Lösungen für den Etikettendruck und die Warenkennzeichnung

Seit unserer Gründung im Jahr 1997, sind wir erfolgreich als Partner namhafter Hersteller und als Systemintegrator im Bereich der industriellen Kennzeichnung tätig.



Unser Motto lautet:

So flexibel wie möglich und so maßgeschneidert wie nötig.

Ich stehe mit meinem Namen für eine persönliche und kompetente Beratung. Wir hören Ihnen zu und stellen mit Ihnen eine Lösung zusammen, die Ihren individuellen Anforderungen entspricht. Für Sie entwickeln unsere erfahrenen Techniker und Ingenieure neben Etikettiermaschinen, maßgeschneiderte Komplettlösungen inklusive Produkthandling, Automatisierungstechnik und Softwarelösung mit Anbindung an Ihr Warenwirtschaftssystem.

Ich freue mich von Ihnen zu hören.

Bis dahin grüßt Sie

Jörn Janz

Hier finden Sie Ihren Ansprechpartner:

<http://www.jrdrucksysteme.de/kontakt/>

MAINTENANCE:

Your RRC-330 requires no maintenance.

WARRANTY:

The RRC-330 Reel-to-Reel Counter is backed by LABELMATE's famous 3-Year Parts and Labour Limited Warranty. 1-Year Warranty on Power Supplies, Counters and Encoders.

RRC-330

Reel-to-Reel Counter

- *Variable Speed Control*
- *6-Digit Digital Pre-set Counter*
- *330mm (13") Roll Diameter*



Remove all parts from the shipping container and verify contents.

Package Contents

- *User Manual (this document)*
- *RRC-330 Unit*
- *Power Supply Module*
- *Separate User Manual for Counter Unit*

Retain the Shipping Container and Packaging for Storage and Transport

- ***KEEP MANUAL IN A SAFE PLACE FOR FUTURE REFERENCE*** •

LABELMATE LLC

69 AVENUE ALPHONSE XIII, 1180 BRUSSELS, BELGIUM

TEL: +322.375.69.60 – FAX: +322.375.38.96

brussels@labelmate.com

www.labelmate.com

SPECIFICATIONS:

Max. Label Roll Weight:	6Kg (13.2Lb)
Max. Label Roll Size:	330mm (13") diameter
Power Supply:	Input: 220-240VAC – 50-60Hz. Output: 24VDC – 4.17A.
Speed:	Min. 65cm/sec with 76mm take-up roll diameter.

SET-UP:

1. Plug the Power Supply Output Cable to the Power Jack on the Rear Panel of the RRC-330. Plug the Power Supply into a suitable AC Power Mains Outlet. Place the Power Switch on the rear of the RRC-330 to the "ON / 1" position. Observe that numbers are displayed on the Counter.

See the separate User Manual for the Counter Modules itself for other operations.

2. The Counter is pre-programmed as a Preset Count-Up Counter. If you want to use the preset function, introduce the number of labels with the blue push button on the counter. If you do not want to use preset, set the value to "0".
3. When the preset number of labels is reached, the RRC-330 will stop. Pressing "R" on the counter will reset the count and restart the RRC-330.



WARNING!

**This Product is for indoor use only.
Not for use in wet locations.**

OPERATION:

1. Place the "STOP / RUN" Switch in the STOP Position.
2. Place your Roll of Labels on the Roll Holder at the left of the RRC-330. The Take-Up Spindle on the right rotates in a counter-clockwise direction. Note that your rewind can be "Wind-In" or "Wind-Out" according to which way you place the Label Roll on the Roll Holder, right-side-up or upside-down.
3. The 2 plastic rings on the paper guides need to be used only if the unwind roll is unevenly wound to begin with. Setting the rings at the proper height will correct the unevenness of the roll on the rewind side.

4. The machine will stop when out of paper. To re-start, load paper, and set the Stop/Run Switch to STOP. Re-set the counter if necessary. Start by switching to "RUN".
5. Place an empty label Core (not included) over the Take-Up Spindle and secure the Label Web using a piece of tape.
6. Enter the desired Label Count via the Push Buttons on the Counter. If you do not use preset, set the value to "0".

IMPORTANT!

It is recommended to use the machine at its maximum speed. Keep unwind plate clean of particles and glue.

LEFT SIDE CONTROL PANEL:



RESET: The new left-side control panel has three items. The toggle switch (reset) is a momentary closing switch, that has the same function as the reset button on the counter, but is more convenient for the operator.

ADJUST: Potentiometer.

TEST: Green LED

ADJUSTING THE LABEL DETECTOR PHOTOCELL:

The label detector photocell has been adjusted at the factory (potentiometer fully CCW) and requires no adjustment for a large variety of labels. However, some specific labels (very transparent or relatively opaque backing paper) might require adjustment of the photocell.

Load a roll of labels on the machine, and position the backing paper in front of the photocell. Make sure that the labels are tensioned when doing the test. The LED should light on. If not, rotate the potentiometer till LED goes on "green". Now put a label in front of the photocell, the LED should turn off.